



1. Identification/recognition			
RENAULT TRUCKS			
2. Immobilisation/stabilization/lifting			
Always approach the vehicle from the sides to stay out of the potential travel path. It may be difficult to determine, if the vehicle is running due to lack of noise 1 Chock the wheels 2 Apply the hand brake Image: Comparison of the potential travel path. It may be difficult to determine, if the potential travel path.			
3. Disable direct hazardous/saftety regulations			
	r for any of the symbols (1) and (2) are unaway is detected in the lithium-ion l		
2 Turn off the ignition and remove	e the key		
Image: Second system Image: Second system Put the chassis switch in 'UP' position to launch the high voltage disconnection process All components are designed to discharge their own capacitance within 5 seconds			
If the truck is charging			
1 Unlock the cab			
2 Press the stop button (1) and wait for the steady yellow light (2)			
3 Pull the charging plug from the charging inlet, once the yellow light (2) goes off			
S If the charging plug cannot be pulled out : retract the pin manually			
Put the chassis switch in 'UP' position to launch the high voltage disconnection process		connection	
2 Remove the screws (1) and rer	move the cover (2)		
3 Rotate the lever (3) and remove the charging plug (4)			
	Identification number	Version number	Page number
	800077265	06/2020	3

